SAMSUNG Qualcomm – UNBICK/DEBRICK
SAMSUNG GALAXY A23 | SM-A235M

UNBRICK|DEBRICK SAMSUNG GALAXY A235M is 2 Steps

Step 1: Write Boot [Emergency Download]
In this step we are going to write the emergency_download file of the Model to be repaired...

Run Qualcomm Module

In Brand Option : Select Autodetect

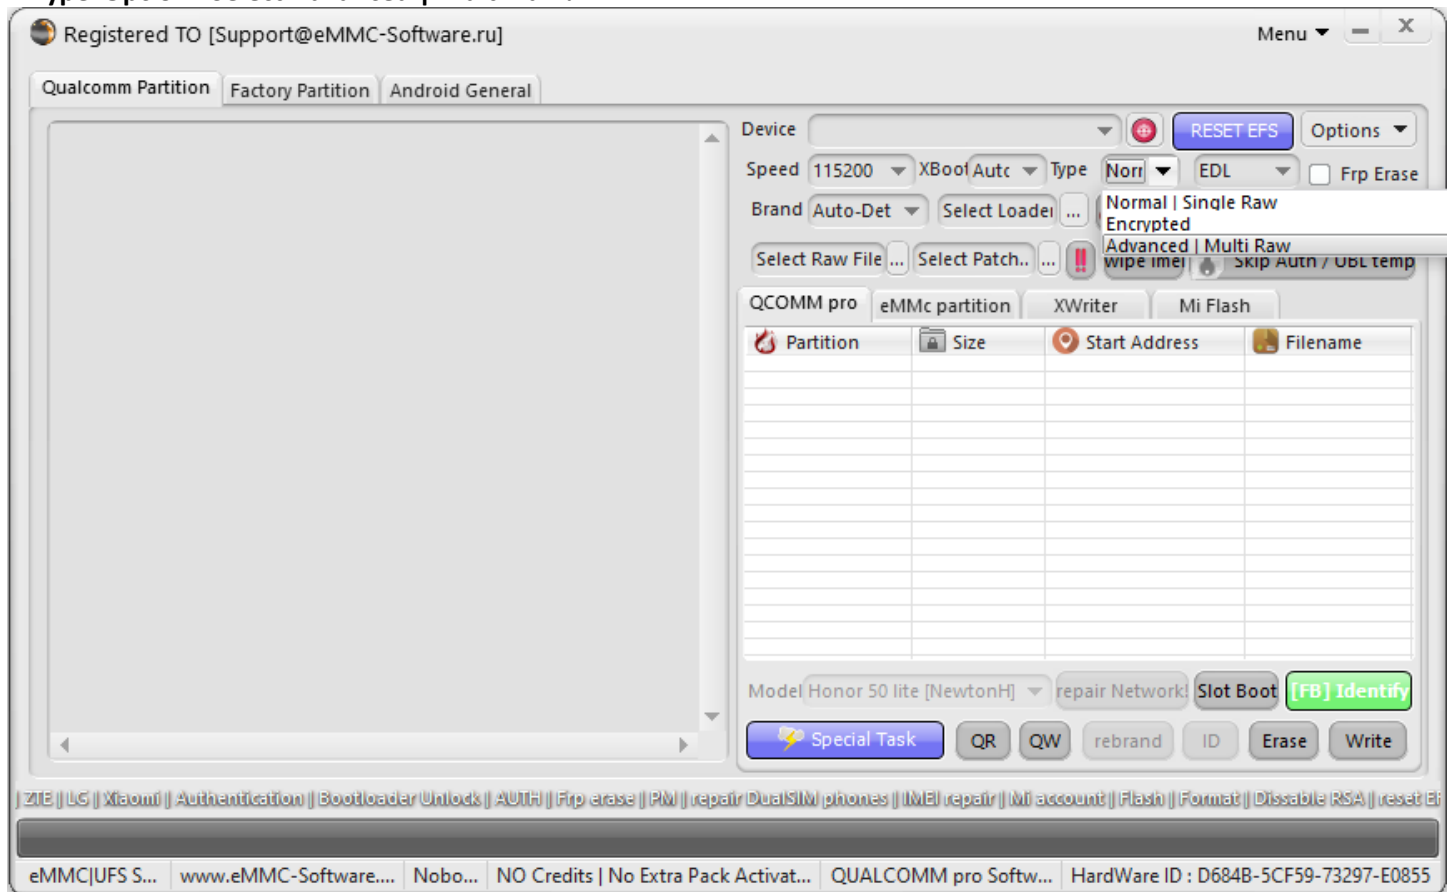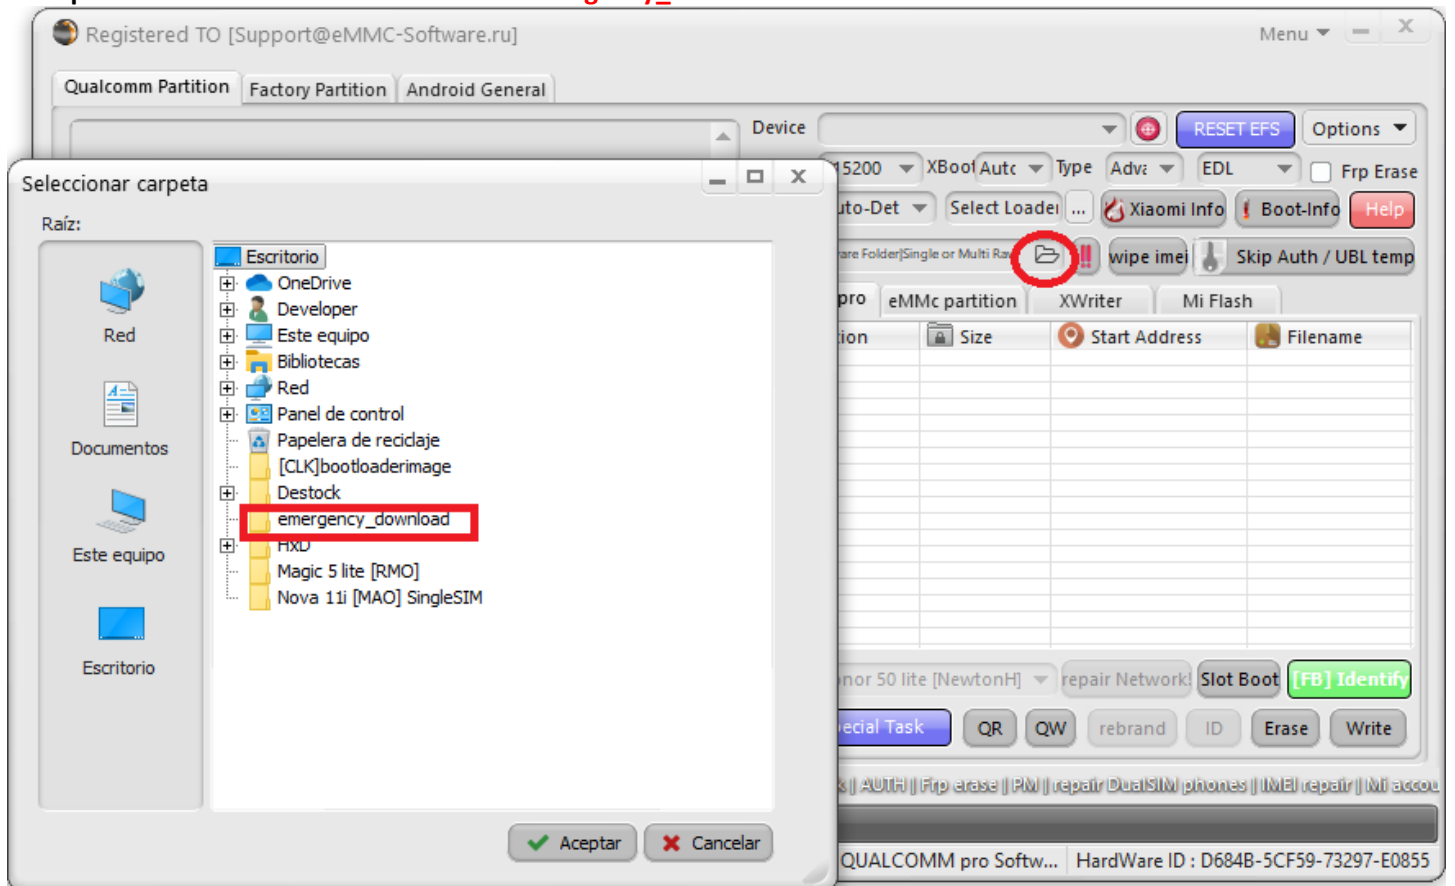

In Xboot : Select Auto

InType Opcion : Select Advanced | Multi Raw!

Once this Configuration is done in Our Qualcomm Module!! We can start with the Work...

Now press- Folder Icon and Select Folder "Emergency_Download"

Files loaded Correcrtly from "Emergency_Download"

Please Connect your Device in Qualcomm Mode | Edl Mode

Presss Write "Button" **|**
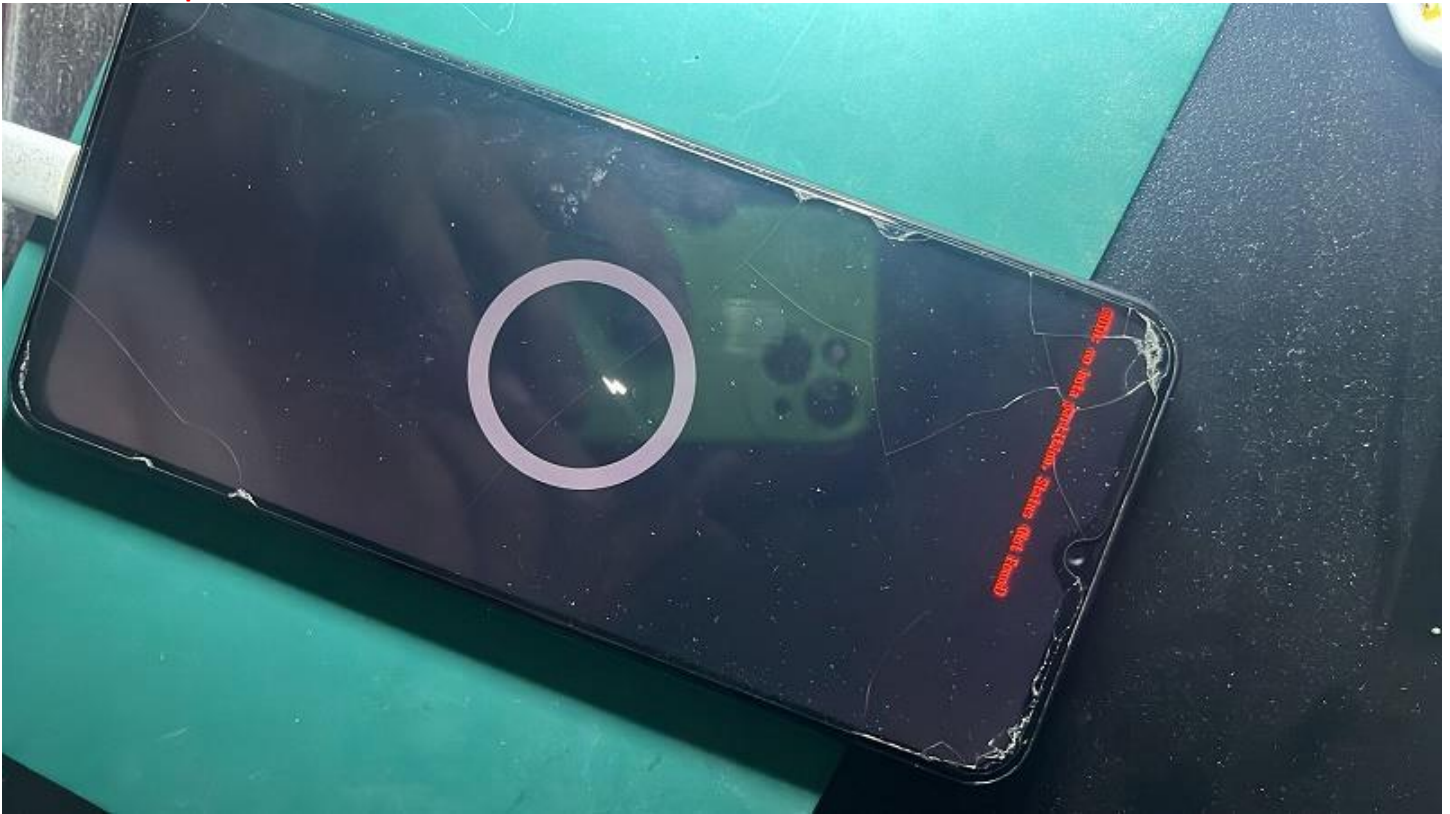**Please wait for the Operation to start | This will write certain partitions,** to repair the Boot...

Device Flashed Correctly!!! **All ENG Files Written Correctly..**

After repair Boot!! Try to Turn ON!!
-Now we must place it in Download Mode to Write the Correct Firmware.

Note
After repairing the Bootloader.. you must Flash the Correct Firmware!!
-Use auto-ODIN! for this

.

Put your SAMSUNG A23 [SM-A235M] in Download Mode

Run Auto-ODIN | A235M_TPA_One-Click_Binary.exe
press START "Button" For to Start Official Flashing...

Everything went OK!....

Turn on your device and This Was DTpro tool in a New Master Class!